

④ VOL / PUSH

Turn knob to adjust volume. Turn knob continuously to quickly adjust volume.
 Long press and turn knob to select from LOUD ---EQ ---BEEP ---ID3.
 Under Radio, press to go to LOC, ST setting.

⑤ 2 / PRT

Radio: Short press, tune to preset radio station #2. Long press, store current radio frequency to #2.
 USD / SD: Short press, repeat single song.

⑥ 1 / ►||

Radio: Short press, tune to preset radio station #1. Long press, store current radio frequency to #1.
 USD / SD: Short press, pause / play.

⑦ 3 / INT

Radio: Short press, tune to preset radio station #3. Long press, store current radio frequency to #3.
 USD / SD: Short press, 10 seconds intro play of MP3 song. Press again to play song.

⑧ 4 / RDM

Radio: Short press, tune to preset radio station #4. Long press, store current radio frequency to #4.
 USD / SD: Short press, Play all songs in random mode. Press again to cancel random mode.

⑨ LCD Display Monitor

⑩ SD card insert slot