

⑪ **U S B** Insert slot

⑫ Remote control reception port

⑬ **5 / -10**

Radio: Short press, tune to preset radio station #5. Long press, store current radio frequency to #5.

USB/SD: Short press, backward select 10 songs.

⑭ **B A N D**

Under Radio, press to switch between FM1, FM2, FM3, AM1, AM2.

Long press to select MP3 songs. Turn knob to select song, press knob to confirm.

⑮ **R E S E T**

Press to restore factory setting.

⑯ Bluetooth matching confirmation sign

⑰ **M I C**

⑱ **A U X**