

**16** MUT : Short press to mute. Press again to resume volume.


**17** IR receipt port

**18** Radio: Short press to manual search radio station.

◀▶▶▶ Long press to auto search radio station.

Under USB/SD: Short press to select song.

Under main menu: Press to select function.

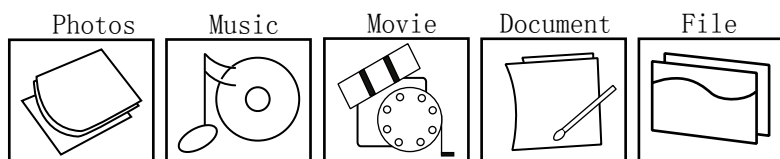

**19** Mode: FM --> MP5 --> AUX

MP3 :

Insert USB or SD/MMC, use remote control to select song, press ENTER to confirm. Press stop to return to MP3 interface.

MP5 :

Insert USB or SD/MMC, use remote control to select video file, press ENTER to confirm. Press stop to return to MP5 interface.

JPG :

Insert USB or SD/MMC, use remote control to select JPG file, press ENTER to confirm. Press stop to return to JPG interface.

## Remote Control

MF-300 (No Bluetooth)

- 1** Mode : FM ---> MP5 ---> AUX
- 2** Power: On/Off
- 3** Press to hang up phone call
- 4** Confirm key
- 5** Selection key
- 6** Call answer key
- 7** Radio: Long press to auto search radio station  
MP3/MP5: Fast forward
- 8** Number key
- 9** Under video playing, press to select  
Left / Right channel
- 10** Insert USB/SD/MMC, press to open Music file.
- 11** Insert USB/SD/MMC, press to open Video file.
- 12** Insert USB/SD/MMC, press to open JPG file.
- 13** Press to select preset EQ
- 14** Press to select LOUD
- 15** Radio: Short press to select preset station. Long press to save radio station.
- 16** Press to select video system.
- 17** Press to zoom in during video playing.
- 18** After insert USB/SD/MMC, press to select JPG, Mp3, Video, files.
- 19** Long press to enter system setting.
- 20** Radio: Press to select FM1/FM2/FM3/AM1/AM2.
- 21** Press to increase / decrease volume.
- 22** Press to mute. Press again to resume volume.
- 23** Press to start intro play M1 - M6 radio station. Long press to start search and auto save.

