


## Front View and Function Description

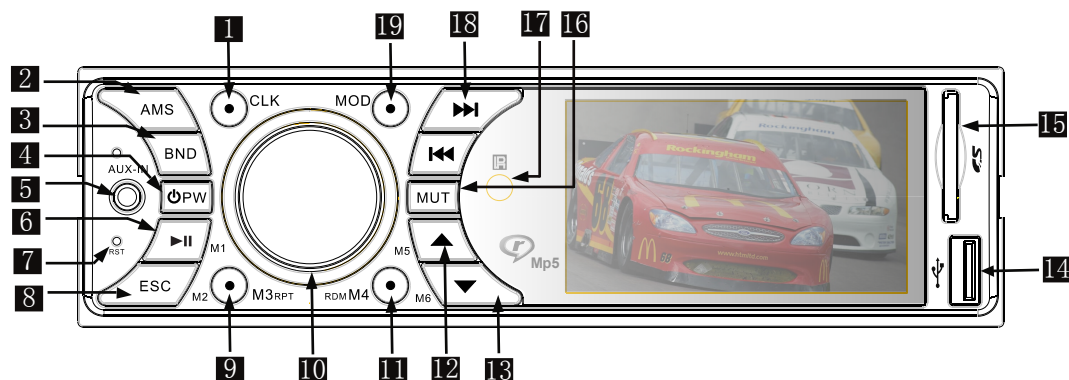

- 1** Short press to display clock mode.
- 2** AMS: Long press to auto search and save radio station. Short press to start M1-M6 intr play.
- 3** AM/FM switch
- 4** Power On/Off : Short press to power on. Press again to power off.
- 5** AUX audio in.
- 6** Radio: Short press to select preset radio station 1. Long press to save radio station to channel 1.  
USB/SD: Short press to pause. Press again to resume playing.
- 7** Reset: Press to resume factory setting.
- 8** ESC/M2  
Radio: Short press to select preset station 2. Long press to save radio to channel 2  
USB/SD: Short press to return to main menu. Press again to select JPG, Mp3, Video files, press **▶||** to confirm.
- 9** Radio: Short press to select preset radio station 3. Long press to store radio station to channel 3.
- 10** Volume: Turn clockwise to increase, counter clockwise to decrease.  
Short press the knob to adjust Bass, Treble, Balance, Fade.  
Long press the knob to enter: BASIC / PIC / AUDIO
- 11** Radio: Short press to select preset station 4.  
Long press to save radio to channel 4
- 12** Radio: Short press to select preset station 5.  
Long press to save radio to channel 5.  
Use as selection key at main menu.
- 13** Radio: Short press to select preset station 6.  
Long press to save radio to channel 6.  
Use as selection key at main menu.
- 14** USB slot
- 15** SD slot

**9** Radio: Short press to select preset radio station 3. Long press to store radio station to channel 3.

**10** Volume: Turn clockwise to increase, counter clockwise to decrease.  
Short press the knob to adjust Bass, Treble, Balance, Fade.  
Long press the knob to enter: BASIC / PIC / AUDIO

BASIC	PIC	AUDIO
RADIO	BRIGHT	BASS
CLOCK	COLOR	TREBLE
LOC	CONTRAST	BALANCE
BEEP	MODE	FADE
STERO		LOUD
		EQ

**11** Radio: Short press to select preset station 4.  
Long press to save radio to channel 4

**12** Radio: Short press to select preset station 5.  
Long press to save radio to channel 5.  
Use as selection key at main menu.

**13** Radio: Short press to select preset station 6.  
Long press to save radio to channel 6.  
Use as selection key at main menu.

**14** USB slot

**15** SD slot